



- When operating the watch, make sure that it is not wet.
- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:  B612 instruction manual

Component identification

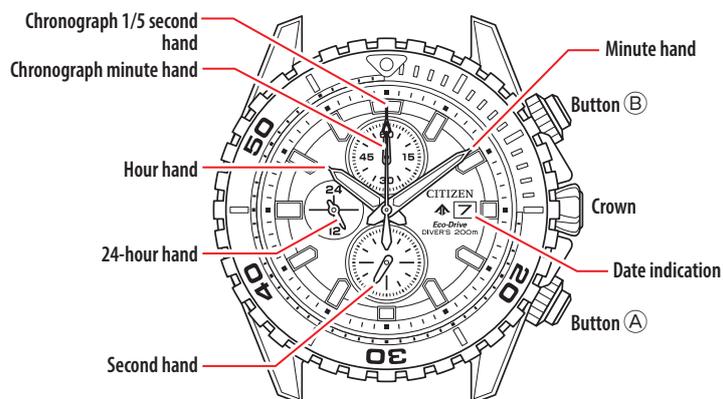

- Actual appearance may differ from the illustrations.
- The crown has two positions when pulling it out.

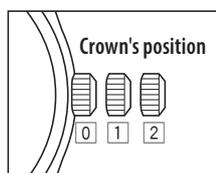

Setting the time

1. Pull the crown out to position **2** when the second hand points **0** second.

The second hand stops.

2. Rotate the crown to set the time.

- The 24 hour hand also moves synchronously. Take care the time set is AM or PM.
- Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.

3. Push the crown in to position **0** in accordance with a reliable time source to finish the procedure.

Adjusting the calendar


Date indication adjustment is required on the first days of March, May, July, October and December.

- Do not adjust the date indication between 9:00 PM and 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.

1. Pull the crown out to position **1**.
2. Rotate the crown counterclockwise to set the date indication.
3. Push the crown in to position **0** to finish the procedure.

Using the chronograph

1. Push the crown in to position **0**.
 - If the chronograph minute hand does not point 00 before starting measurement, press and release the lower right button **A** to reset it.
2. Start/stop: press button **B**.
3. Reset: press button **A** while the chronograph is stopped.

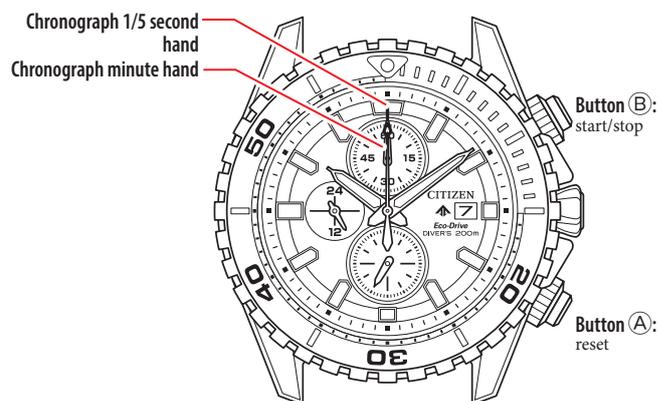

- The chronograph measures up to 60 minutes.
- You cannot use the chronograph while insufficient charge warning status (2-second interval movement).

Adjusting the position of the chronograph 1/5 second hand

Adjust the position of the chronograph 1/5 second hand when it does not return to 0 seconds.

1. Pull the crown out to position **2**.
2. Press and hold the upper right button **B** for 3 seconds or more. The chronograph 1/5 second hand becomes adjustable.
3. Press and release the upper right button **B** to set the position of the chronograph 1/5 second hand to 0 seconds.
 - Each time you press the button, the chronograph 1/5 second hand moves by 1 step.
 - Pressing and holding the button moves the chronograph 1/5 second hand continuously.
 - The chronograph minute hand also moves synchronously with the chronograph 1/5 second hand.
4. Rotate the crown to set the time.
5. Push the crown in to position **0**.
6. Press and release the lower right button **A** to finish the procedure.
 - Pressing the button resets the chronograph minute hand.